


# INSTRUCTION SHEET

## NUCLEAR PULSE-SPACE STATION

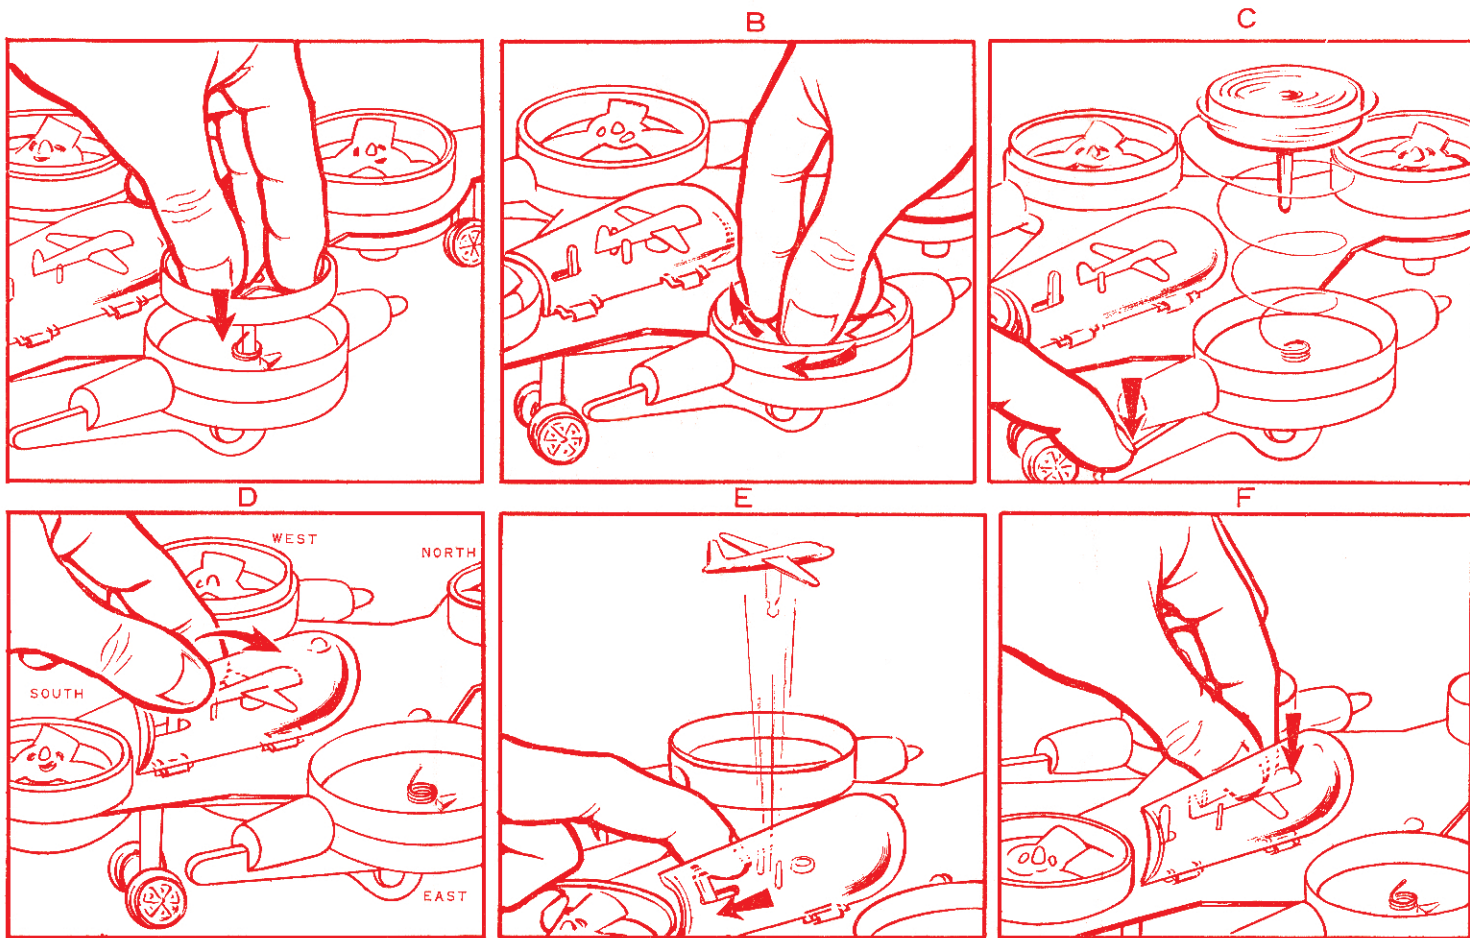

1. The two Flying Saucers are fitted in the 'East/West' blade housing sections.
2. The two metallised rotor blades are fixed, and are interchangeable with the Flying Saucers. To release the metallised rotor blades, remove the connecting pieces on the base of the 'North/South' housing sections.
3. Fit Flying Saucers firmly onto the spring. (See Sketch 'A').
4. To avoid overwinding, it is recommended that the Flying Saucers should be wound in a clockwise direction 4 to 5 turns. (See Sketch 'B').
5. To release Flying Saucer, press down lever. (See Sketch 'C').
6. To launch space ship, open see-through integral launch pad hatch and press back launching button. (See Sketches 'D' & 'E')
7. The space ship can be re-launched by pressing in to launching section. (See Sketch 'F').